

ME435 Poly-phase Handheld Power Meter



Connectivity advantages	
Model	ME435
Support Extra sensor	3pcs BNC terminal 333mV CT 3pcs BNC terminal 320mV current clamp 3pcs BNC terminal Rogowski coil
Storage	1GB SD card(Max 4GB) (save intervals 1mins default)
Power	4*AA battery(wroking time: approx 7 hours) Or USB Type-C

Feature

Specification	
Model	ME435
Product component type	Handhold poly-phase power meter
Poles description	3PH4W 3PH3W 1PH2W (L-N); 1PH2W(L-L);1PH3W(L-L-N)
Device application	Power analysis Energy meter
Input type	External Rogowski coil External CT(333mV only)
Display	3.5 inch TFT screen display
Sampling rate	8k samples per second
Harmonic	52th Max
Mechanical characteristics	
Weight	350g
Dimension	L*W*D:21.5*10*3.5CM

Power Meter Characteristics

The power meter measures currents and voltages and reports real-time RMS values for all 3-phases and neutral. In addition, the power meter calculates power factor, realpower, reactive power, and more.

The following sections list the metering characteristics of the power meter.

Real-Time Measuring

The following table lists the metering characteristics of the power meter for the real-time measurement:

Characteristics	Description
Current	Per phase, neutral, and average of 3 phases
Voltage	L-L, L-N, and average of 3 phases
Frequency	45...65 Hz
Active power	Total and per phase (signed)
Reactive power	Total and per phase (signed)
Apparent power	Total and per phase(signed)
Power factor (True)	Total and per phase 0.000 to 1 (signed)
Angle	Voltage angle,Current angle
Current unbalance	Per phase, most unbalanced of 3 phases
Voltage unbalance	most unbalanced of 3 phases

Minimum/Maximum Values

When any one-second real-time reading reaches its highest or lowest value, the power meter saves the minimum and maximum values in its nonvolatile memory.

From the power meter display, you can:

- view all min./max. values since the last reset and the reset date and time.
- reset min./max. values.

All running min./max. values are arithmetic minimum and maximum values. For example, the minimum phase A-N voltage is the lowest value in the range from 0 to 999.9GV that has occurred since last reset of the min./max. values.

The power meter provides time stamping for all minimum/maximum values.

The following table lists the minimum and maximum values stored in the power meter:

Characteristics	Description
Current	Per phase and average
Voltage	per phase and average
Active power	Per phase and total
Reactive power	Per phase and total
Apparent power	Per phase and total

Demand Readings

The power meter provides the following demand readings.

Characteristics	Description
Current	Per phase and average
Active, reactive, apparent power	Per phase and Total
Peak Demand Values	
Current	Per phase and average
Active, reactive, apparent power	Per phase and Total

Demand Calculation Methods

Power demand is the energy accumulated during a specified period divided by the length of the period. Current demand is calculated using arithmetical integration of the current RMS values during a time period, divided by the length of the period. How the power meter performs this calculation depends on the selected method. To be compatible with electric utility billing practices, the power meter provides block interval power/current demand calculations.

For block interval demand calculations, you select a block of time (interval) that the power meter uses for the demand calculation and the mode the meter uses to handle the interval. 2 different modes are possible:


- Fixed block - Select an interval from 1 to 60 minutes (in 1 minute increments). The power meter calculates and updates the demand at the end of each interval.
- Sliding block - Select an interval from 1 to 60 minutes (in 1 minute increments). For demand intervals less than 15 minutes, the value is updated every 15 seconds. For demand intervals of 15 minutes and greater, the demand value is updated

every 60 seconds. The power meter displays the demand value for the last completed interval.

The following figures illustrate the 2 ways to

calculate demand power using the block

method. For illustration purposes, the interval is set to 15 minutes.

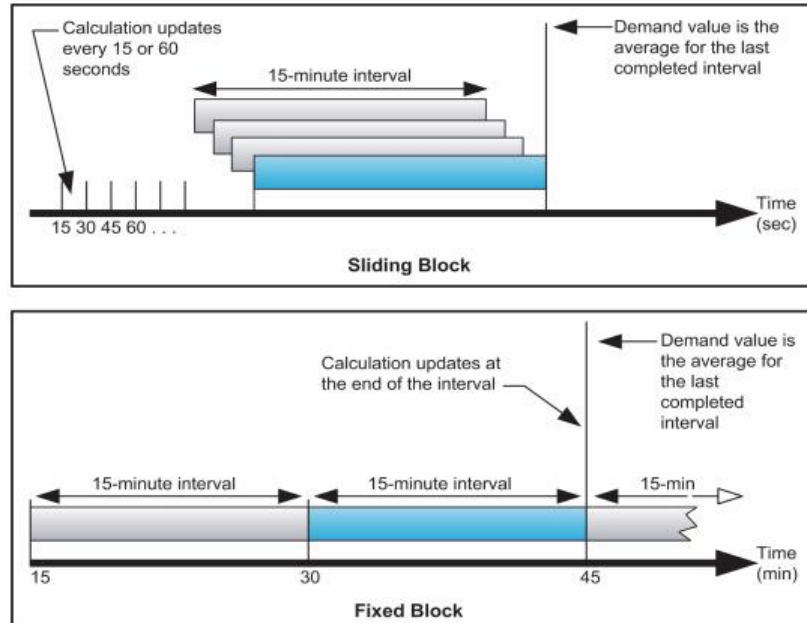

Peak Demand

In nonvolatile memory, the power meter maintains a maximum operating demand value called peak demand. The peak is the highest value (absolute value) for each of these readings since the last reset.

You can reset peak demand values from the power meter display. You should reset peak demand after changes to basic power meter setup such as power system configuration.

Energy Readings

The power meter calculates and stores Per phase and total energy values for active, reactive, and apparent energy.

You can view energy values from the display. The resolution of the energy value automatically changes from kWh to MWh to GWh (kVAh to MVARh to GWh).

The energy values automatically resets to 0 when it reaches the limit of 999.9GWh, 999.9GVAh, or 999.9GVARh.

The following table lists the energy readings from the power meter:

Characteristics	Description
Energy values	
Active energy	0 to 999.9GWh Auto reset to 0 in case of over limit
Reactive energy	0 to 999.9GVARh Auto reset to 0 in case of over limit
Apparent energy	0 to 999.9GVAh Auto reset to 0 in case of over limit

Power Quality Analysis Values

The power quality analysis values use the following abbreviations:

- Fundamental phase current rms: I_1
- Fundamental phase voltage rms: V_1
- RMS of up to three harmonics of phase current:
 $I_x, I_y, I_z, x, y, z = 2, 3, \dots, N$
- RMS of up to three harmonics of phase voltage:
 $V_x, V_y, V_z, x, y, z = 2, 3, \dots, N$
- Total harmonic distortion of the phase current

$$(THD)_I = \frac{\sqrt{I^2 - I_1^2}}{I_1}$$

- Total harmonic distortion of the phase voltage

$$(THD)_V = \frac{\sqrt{V^2 - V_1^2}}{V_1}$$

- Harmonic distortion of up to three harmonics on the phase current

$$HD_{I_x} = \frac{I_x}{I_1}, x = 2, 3, \dots, N$$

$$HD_{I_y} = \frac{I_y}{I_1}, y = 2, 3, \dots, N$$

$$HD_{I_z} = \frac{I_z}{I_1}, z = 2, 3, \dots, N$$

- Harmonic distortion of up to three harmonics on the phase voltage:

$$HD_{V_x} = \frac{V_x}{V_1}, x = 2, 3, \dots, N$$

$$HD_{V_y} = \frac{V_y}{V_1}, y = 2, 3, \dots, N$$

$$HD_{V_z} = \frac{V_z}{V_1}, z = 2, 3, \dots, N$$

THD provides a measure of the total distortion present in a waveform. THD is the ratio of harmonic content to the fundamental and provides a general indication of the quality of a waveform. THD is calculated for both voltage and current.

The following table lists the power quality values of the power meter:

Characteristics	Description
THD	X,Y,Z,A,B(5 times each time) Per phase current,total (percent and rms value) X,Y,Z,A,B(5 times each time)Per phase voltage,total (percent and rms value)

Data Record

The power meter records data to SD card, the following table lists data record of the power meter.

Record	
Record interval	1s to 9999s (default 1min)
Record format	csv
Record capacity	Micro SD card 1GB (default)
	Store about 1K Bytes data each time
	record 2 years (1min & 1GB)
Record data	Date&time, Voltage(V),UTHD(%),Current(A),ITHD (%), ITHD3(%),ITHD5(%), ITHD7(%), ITHD11(%), ITHD13(%), ITHD3(A), ITHD5(A), ITHD7(A), ITHD11(A), ITHD13(A) Frequency(Hz), PF(power factor), Active Power(W),Reactive Power(Var),Apparent Power(Va), Active Energy(Wh),Reactive Energy(Varh),Apparent Energy(Vah) Current Demand(A),Current Peak Demand(A)&Date Total Active Power Deamnd(W) Total Active Power Peak Deamnd(W)&Date Total Reactive Power Deamnd(W) Total Reactive Power Peak Deamnd(W)&Date Total Apparent Power Deamnd(W) Total Apparent Power Peak Deamnd(W)&Date

Other Characteristics

The following table lists other characteristics of the power meter:

Characteristics	Description
Reset	
Minimum and maximum values	—
Peak demand values	—
Current demand calculation method	1 to 60 minutes
Power demand calculation method	1 to 60 minut
Environmental conditions	
Operating temperature	-25°C to +55°C
Storage temperature	-40°C to +85°C
Humidity rating	5 to 95% RH at 50°C (non-condensing)
Pullution degree	2
Overvoltage category	III, for distribution systems up to 277/480VAC
Dielectric withstand	As per IEC61010-1, Doubled insulated front panel display
Altitude	3000m Max
IP degree of protection	IP20 conforming to IEC 60629
Colour	White
Contractual warranty	12months
EMC	
Electrostatic discharge	Level IV (IEC61000-4-2)
Immunity to radiated fields	Level III (IEC61000-4-3)
Immunity to fast transients	Level IV (IEC61000-4-4)
Immunity to surge	Level IV (IEC61000-4-5)
Conducted immunity	Level III (IEC61000-4-6)
Immunity to power frequency magnetic fields	0.5mT (IEC61000-4-8)
Conducted and radiated emissions	Class B (EN55022)
Standard compliance	
EN 62052-11, EN61557-12, EN 62053-21, EN 62053-22, EN 62053-23, EN 50470-1, EN 50470-3, EN 61010-1, EN 61010-2, EN 61010-031	

Specification

Measurement accuracy		
Rated current (5 level selectable)	100A(0.5% from 10A to 120A)	
	600A(0.5% from 10A to 720A)	
	1000A(0.5% from 10A to 1200A)	
	3000A(0.5% from 30A to 3600A)	
	6000A(0.5% from 60A to 7200A)	
Rogowski coil connect setting	100A	MRC-16
	600A	MRC-36
	1000A	Y-FCT-200 or Y-FCT-350 or NRC-100
	3000A	NRC-150 or Y-FCT-510
	6000A	NRC-200 or Y-FCT-800
ST08 current clamp	5A	0.5% (100mA~5A) 1%(10mA~100mA)
	10A	0.5% (100mA~10A) 1%(10mA~100mA)
CTs connect setting	Primary setting:	from 1A to 999999A
	Secondary setting:	from 0.001mV to 333mV
Voltage	0.2% from 60V to 500V	
Power factor	±0.005	
Active/Apparent Power	IEC62053-22 Class 0.5	
Reactive power	IEC62053-21 Class 2	
Frequency	0.01% from 45 to 65Hz	
Active energy	IEC62053-22 Class 0.5s	
Reactive energy	IEC62053-21 Class 2	
Input-current characteristics		
Primary current range	100A	0.5A to 120A
	600A	0.5A to 720A
	1kA	1A to 1200A
	3kA	3A to 3600A
	6kA	6A to 7200A
Measurement input range	1/2 ²⁵ mV-333mV	
Permissible overload	600mV for 10s/hours	
Power Supply		
Power	4*AA battery(working time: approx. 7hours)	
	USB Type-C	
power consumption		
Screen Backlight On	1100mW	
Screen Backlight Off	900mW	
Wire diameter for terminals		
Current input	BNC connector	
Voltage input	Banana plug	
DC power supply	DC 5.5*2.1 plug	

Port definition

Port number	Port name	Port function	Remarks
1	IA	A-phase current input	Current input
2	IB	B-phase current input	
3	IC	C-phase current input	
4	UN	N-phase voltage input	Voltage input
5	UC	C-phase voltage input	
6	UB	B-phase voltage input	
7	UA	A-phase voltage input	
8	Power	USB Type-C	USB Type-C
9	Micro SD	SD card	Take out(in) SD card

Accessories


Accessories	
Voltage wires	4pcs voltage clamp wires with banana plug (2 meters, 1.5mm ²)
Adaptor	85-265 AC to 9V DC adaptor
SD card	1GB
Remark	Rogowski coil and AA battery not included

Wiring


*: Rogowski coil secondary output voltage can not over 333mV rms.

^: CT must be voltage output, secondary output can not over 333mV rms.


3PH4W

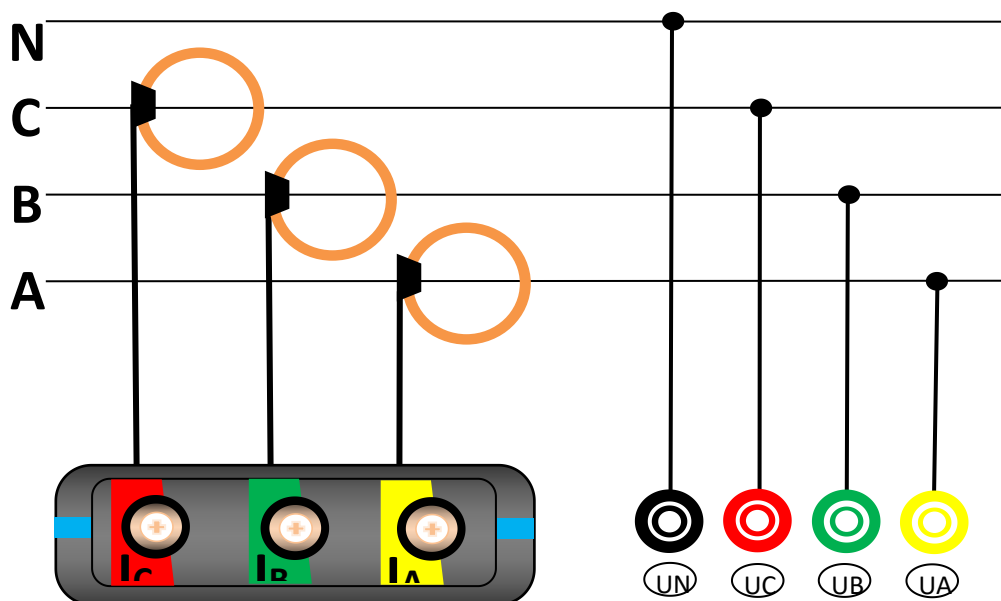


3PH3W

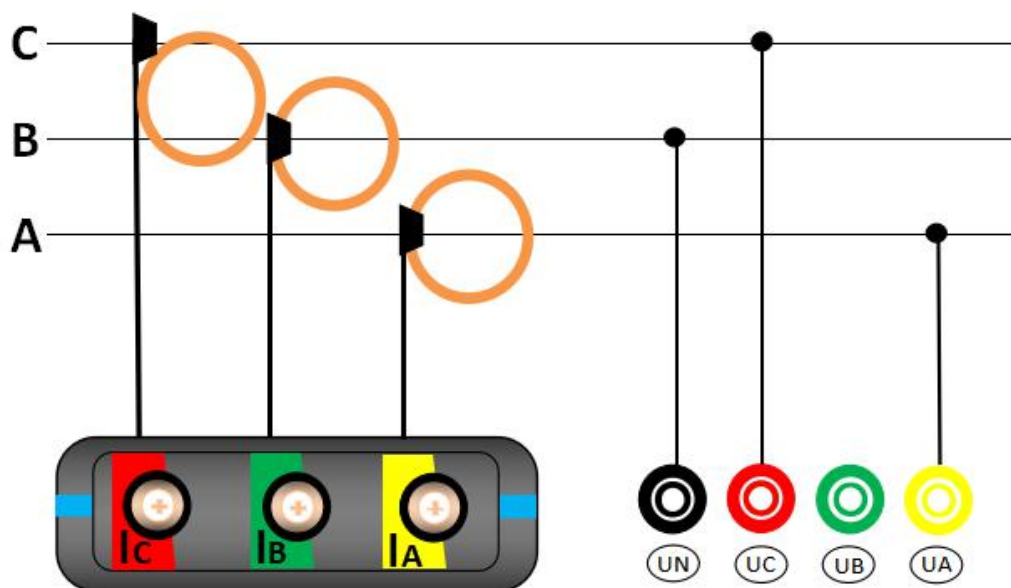


1PH2W L-N

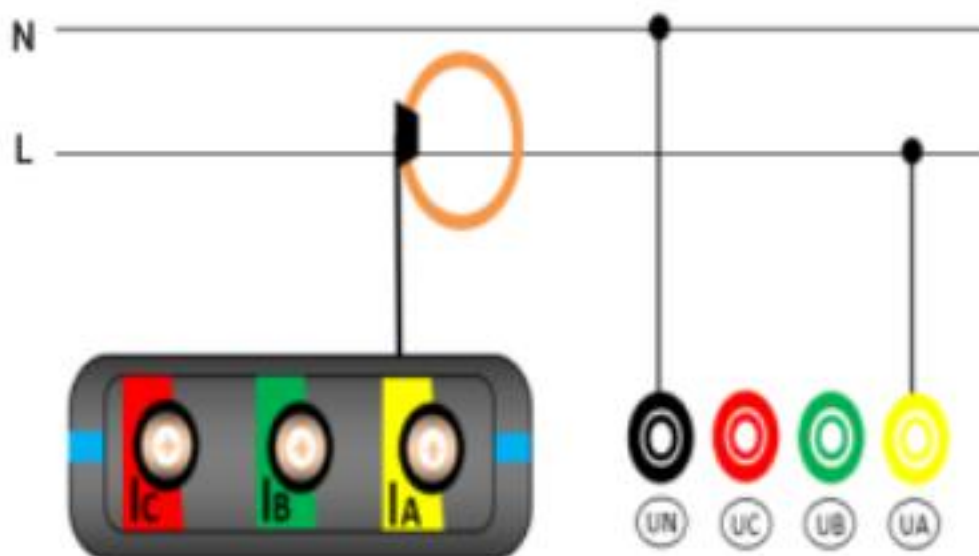

1PH2W L-L

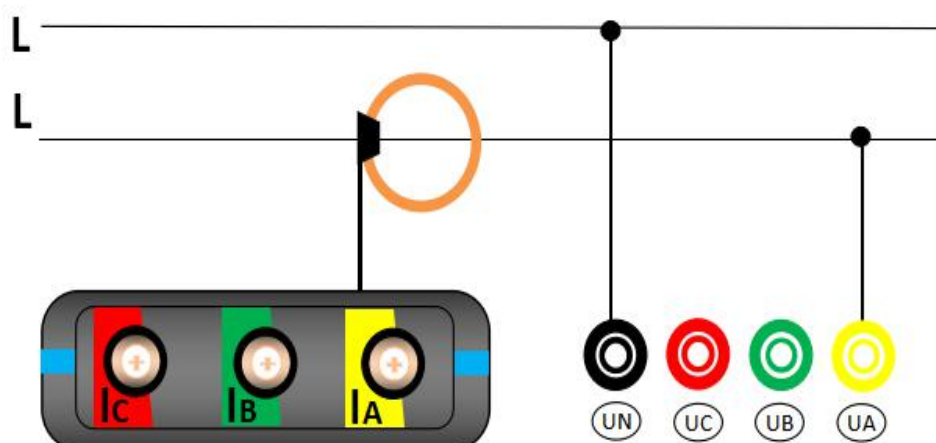

1PH3W L-L-N

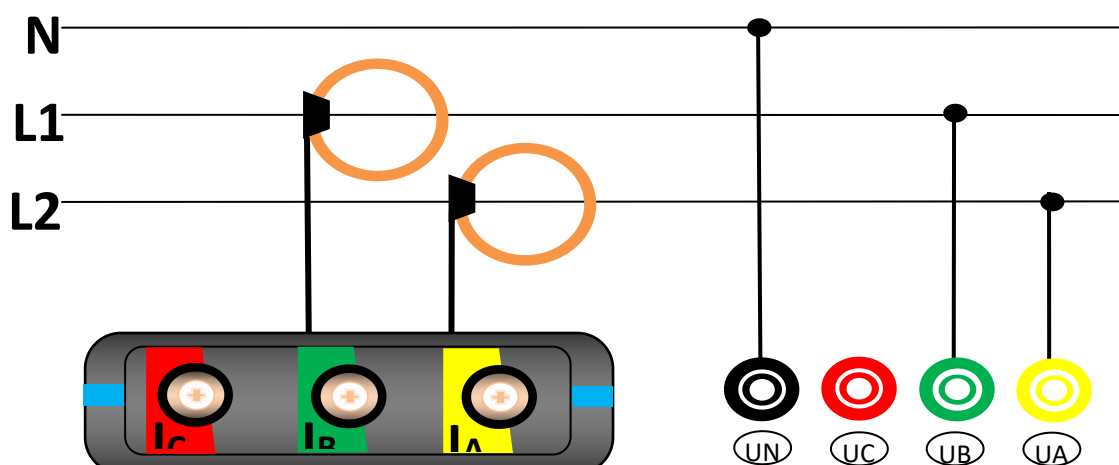

Installation

Current input



Voltage input



Battery



Power and SD Card



Meter operation

Introduction

The power meter features a panel with TFT LCD, a graphic display, and contextual menu buttons for accessing the information required to operate the power meter and modify parameter settings.

The Navigation menu allows you to display, configure, and reset parameters


Configuration mode

The default factory settings are listed in the following table:

Function	Factory settings
Wiring	3PH4W; VT Direction connection; 3 Rcoils on I1, I2, and I3 50Hz
Ratio	Rcoil FSA=1000A VT ratio=NA
SD Card	Switch=ENABLE Period=60s
Harmonic	H1=3 H2=5 H3=7 H4=9 H5=11
Password(Low)	1000
Date/Time	-
BackLight	Switch=ON Period=60s Backlight=5
Demand	Method: sliding block; Interval: 15 minutes


Interface

1. Date display Interface

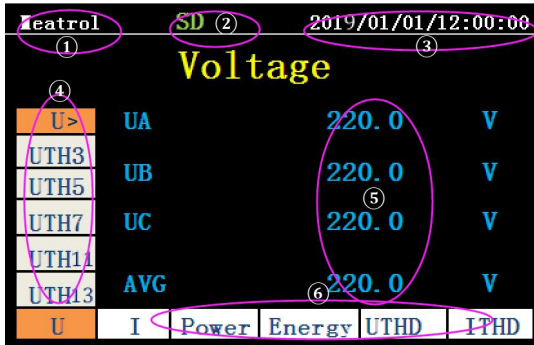

- ① Company name
- ② SD card state
Green: SD card working
Red: Do not find SD card
Yellow: SD card not working
- ③ Date and Time.
- ④ From left to right,
 Voltage---Current---Power---Energy---
 Voltage harmonic---Current harmonic

Button:

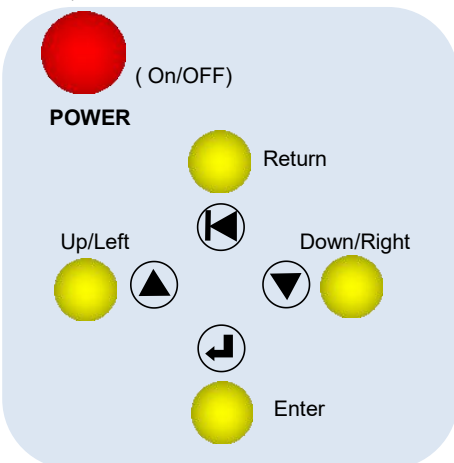

- Area ④ switch by "Up/Down"
- Area ⑥ switch by long press "Left/Right"
- Menu or Exit switch by "Return"
- Enter secondary switch by "Enter"

Noted: After entering the subinterface, long press the up and down key can't switch the bottom item, you need to return to the main interface to switch

2. Voltage display Interface

Meatrol	SD	2019/01/01/12:00:00
Voltage		
U>	UA	220.0 V
UTH3	UB	220.0 V
UTH5	UC	220.0 V
UTH7	UC	220.0 V
UTH11	UC	220.0 V
UTH13	AVG	220.0 V
U	I	Power
	Energy	UTHD
		ITHD

Left Area from top to bottom:

- "U>" Voltage RMS value(Secondary interface)
- "UTH3" X times Voltage harmonic RMS value
- "UTH5" Y times Voltage harmonic RMS value
- "UTH7" Z times Voltage harmonic RMS value
- "UTH11" A times Voltage harmonic RMS value
- "UTH13" B times Voltage harmonic RMS value

Voltage RMS value "U>" press "Enter" switch to
Voltage Secondary interface

2.1 Voltage Secondary Interface

Meatrol	SD	2019/01/01/12:00:00
Voltage/ Max.		
Max.	UA	220.0 V
Min.	UB	220.0 V
Ubl	UC	220.0 V
Angle	UC	220.0 V
UL	AVG	220.0 V
U	I	Power
	Energy	UTHD
		ITHD

Left Area from top to bottom:

- "Max." Voltage Maximum value
- "Min." Voltage Minimum value
- "Angle" Voltage Unbalance degree
- "UL" Line Voltage value

3. Current display interface

Meatrol	SD	2019/01/01/12:00:00
Current		
I>	IA	100.0 A
ITH3	IB	100.0 A
ITH5	IC	100.0 A
ITH7	AVG	100.0 A
ITH11		
ITH13	IN	100.0 A
U	I	Power Energy UTHD ITHD

Left Area from top to bottom:

- "I>" Current RMS value(Secondary interface)
- "ITH3" X times Current harmonic RMS value
- "ITH5" Y times Current harmonic RMS value
- "ITH7" Z times Current harmonic RMS value
- "ITH11" A times Current harmonic RMS value
- "ITH13" B times Current harmonic RMS value

Current RMS value "U>" press "Enter" switch to Current Secondary interface

3.1 Current Secondary interface

Meatrol	SD	2019/01/01/12:00:00
Current\Demand		
DMD	IA	20.0 A
DPK>	IB	20.0 A
Max.		20.0 A
Min.	IC	20.0 A
Ubl		
Angle	AVG	20.0 A
U	I	Power Energy UTHD ITHD

Left Area from top to bottom:

- "EMD" Current demand
- "DPK>"Current Maximum demand(Third interface)
- "Max." Current Maximum value
- "Min." Current Minimum value
- "Ubl" Current unbalance degree
- "Angle" Current angle

Current Maximum demand(Third interface)(DPK>) press "Enter" to switch.

3.1.1 Current Maximum demand(Third interface)

Meatrol	SD	2019/01/01/12:00:00
Current\DemandPk\IA		
IA	IA	27.34 A
IB		
IC		2019-01-01
AVG		11:00:00
U	I	Power Energy UTHD ITHD

Left Area from top to bottom:

- "IA" Phase A Current Maximum demand
- "IB" Phase B Current Maximum demand
- "IC" Phase C Current Maximum demand
- "AVG" Total Average Current Maximum demand

4. Power display interface

Meatrol	SD	2019/01/01/12:00:00
Active Power		
P>	PA	20.9 w
Q>	PB	20.9 w
S>	PC	20.9 w
PF		
DPF	SUM	20.9 w
U	I	Power Energy UTHD ITHD

Left Area from top to bottom:

- Active Power(Secondary interface)
- Reactive Power(Secondary interface)
- Apparent Power(Secondary interface)
- Power Factor
- Fundamental Power Factor

(Secondary interface) press Enter to switch

4.1 Active Power(Secondary interface)

Meatrol		SD	2019/01/01/12:00:00		
Active Power \DMD					
DMD	PA	20.9	W		
Dpk>	PB	20.9	W		
Max.	PC	20.9	W		
Min.	SUM	20.9	W		
U	I	Power	Energy	UTHD	ITHD

Left Area from top to bottom:

"DMD" Active Power Demand

"Dpk>" Active Power Maximum Demand(Third interface)

"Max." Active Power Maximum Value

"Min." Active Power Minimum Value

"Dpk>" Active Power Maximum Demand(Third interface) press **Enter** to switch

4.1.1 Active Power Maximum Demand(Third interface)

Meatrol		SD	2019/01/01/12:00:00		
Active Power \DMDPk\PA					
PA	PA	27.34	W		
PB		2019-01-01	W		
PC		11:00:00	W		
SUM			W		
W					
U	I	Power	Energy	UTHD	ITHD

Left Area from top to bottom:

"PA" Phase A Active Power Maximum Demand

"PB" Phase B Active Power Maximum Demand

"PC" Phase C Active Power Maximum Demand

"SUM" Total phase Active Power Maximum Demand

Noted:Reactive Power(Q>) and Apparent Power (S>) Interface is similar to above

5. Energy display interface

Meatrol		SD	2019/01/01/12:00:00		
Active Energy					
EP	EPA	20.9	wh		
EQ	EPB	20.9	wh		
ES	EPC	20.9	wh		
Freq	SUM	62.7	wh		
U	I	Power	Energy	UTHD	ITHD

Left Area from top to bottom:

"EP" Active Energy

"EQ" Reactive Energy

"ES" Apparent Energy

"Freq" Frequency

6. Voltage harmonic display interface

Meatrol		SD	2019/01/01/12:00:00		
Voltage THD					
Uthd	UA		1.0	%	
THD3	UB		1.0	%	
THD5	UC		1.0	%	
THD7					
THD11					
THD13					
U	I	Power	Energy	UTHD	ITHD

Left Area from top to bottom:

"Uthd" Total Voltage harmonic percent

"THD3" X times Voltage harmonic percent

"THD5" Y times Voltage harmonic percent

"THD7" Z times Voltage harmonic percent

"THD11" A times Voltage harmonic percent

"THD13" B times Voltage harmonic percent

7. Current harmonic display interface

Meatrol		SD	2019/01/01/12:00:00		
Current THD					
ITHD	UA	1.0	%		
ITH3	UB	1.0	%		
ITH5					
ITH7	UC	1.0	%		
ITH11					
ITH13					
U	I	Power	Energy	UTHD	ITHD

Left Area from top to bottom:

"ITHD" Total Current harmonic percent

"ITH3" X times Current harmonic percent


"ITH5" Y times Current harmonic percent

"ITH7" Z times Current harmonic percent

"ITH11" A times Current harmonic percent

"ITH13" B times Current harmonic percent

8. Menu Interface

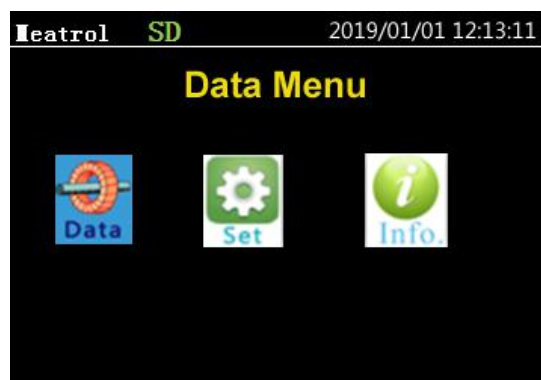

Press "Return" to switch

Press "Up/Down" and "Enter" to choice "Data" "Set" or "Info"

9. Setting Interface.




Enter "Set" on Menu interface.

Enter Password(Low) :1000 (default)

Press Up/Down to change number.

Long press "Up/Down" to change display number position.

9.1 System Setting Operation

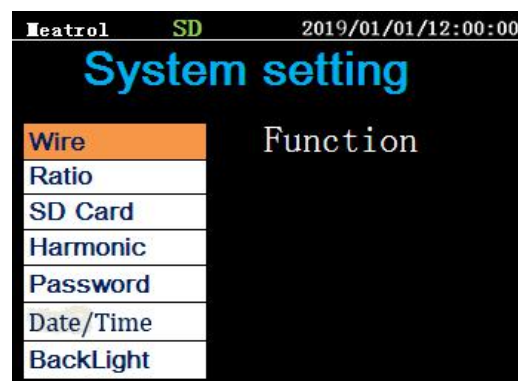

Left Area from top to bottom:

"Wire" Wiring setting

"Ratio" Rated current selection and VT ratio setting.

"SD Card" SD card setting

"Harmonic" Harmonic times setting

"Password" Password change setting


"Date/Time" Date/Time change setting

"Backlight" Backlight adjust

"Demand" Demand setting

"Reset" Reset Energy/Min/Max value

9.1.1 Wire setting

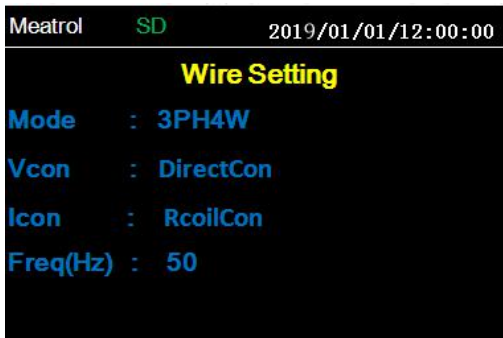

Press Enter ,change to next line.

Press Up/Down,modify value on current line.

“Mode” Choice wiring type

“3PH4W” three phase 4 wire

“3PH3W” three phase 3 wire

“1PH2W_LL” single phase 2 wire L_L type

“1PH2W_LN” single phase 2 wire L_N type

“1PH3W_LL” single phase 3 wire L_L_N type

“Vcon” Select Voltage sensor connect or not

“DirectCon” : Voltage directly input.No VT

“3VT” : 3pcs voltage sensor connect

“Icon” Select Rogowski coil or CT connect

“CTCon” : 333mV Current Transformer connect

“RcoilCon” : Rogowski coil connect directly(No integrator connect)


“Freq” Choice frequency

50Hz

60Hz

Noted: Out of Wire setting interface,will have “Save Changes” notifications,must press “Enter” to Save modify.If press “Return”,the modify can’t be save.

9.1.2 Ratio Setting

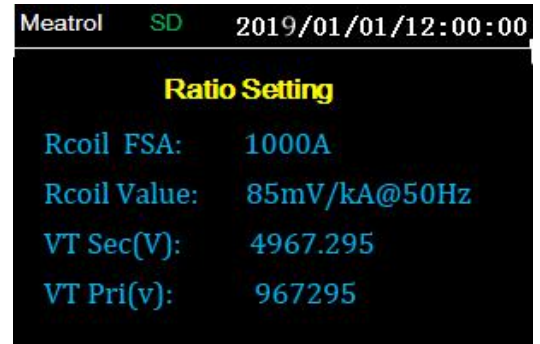

Press Enter ,change to next line.

Press Up/Down,modify value on current line.

Long press Up/Down,change display number position.

Rcoil FSA: Rated Current

100A/600A/1kA/3kA/6kA selection

Rcoil Value: each Rated current corresponding only one ratio of Rogowski coil,can't be change.

100A 50mV/kA@50Hz

600A 50mV/kA@50Hz

1kA 85mV/kA@50Hz

3kA 85mV/kA@50Hz

6kA 50mV/kA@50Hz

VT sec: Voltage sensor Secondary output value


VT PRI: Voltage sensor Primary input value

Noted: If Choice RcoilCon in “Wire” setting,Then this interface will show Rogowski coil rated current selection.

If Choice “CTCon”,this setting is setting CT primary and secondary

If Choice “DirectCon”,the VT ratio setting will not display in this interface.

9.1.3 SD card setting

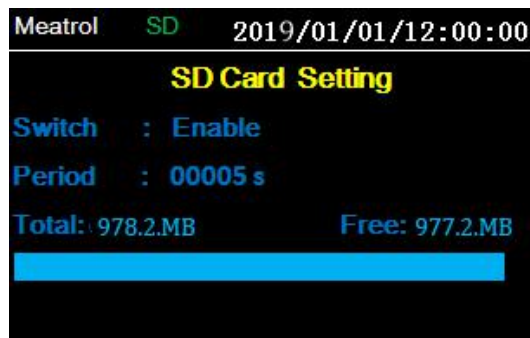

Press **Enter** ,change to next line.

Press **Up/Down**,modify value on current line.

Long press **Up/Down**,change display number position.


"Switch" choice Enable or Disable record function

"Enable" start record function

"Disable" stop record function.

"Period" setting record interval time.(from 1s to 99999s)

9.1.4 Harmonic times setting

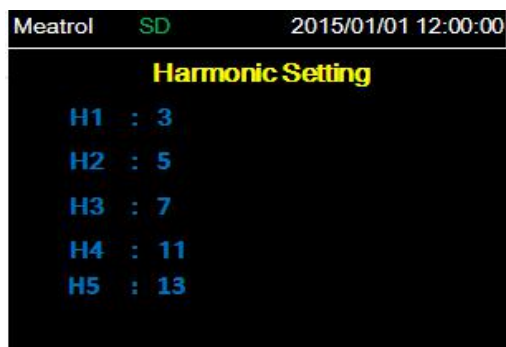

Press **Enter** ,change to next line.

Press **Up/Down**,modify value on current line.

Long press **Up/Down**,change display number position.

Could measure 5 different times harmonic.

Setting times range: 2 to 52 times.

9.1.5 Password setting



Press **Enter** ,change to next line.


Press **Up/Down**,modify value on current line.

Long press **Up/Down**,change display number position.

Password default is 1000

Enter again "set" interface,should enter new password after modify.

9.1.6 Date/Time Setting

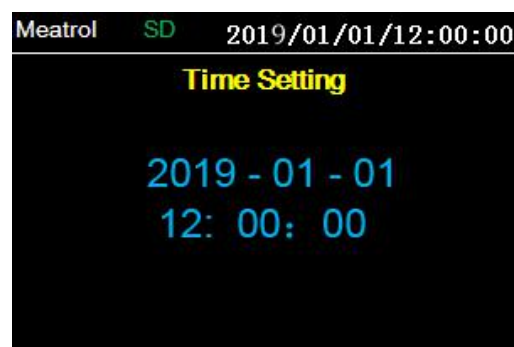

Press **Enter** ,change to next line.

Press **Up/Down**,modify value on current line.

Long press **Up/Down**,change display number position.

9.1.6 BackLight setting



“Switch” choice back light mode.

ON: back lights on always

KEY: Automatic back light off

“Period” Setting Automatic back light off time

“Backlight” setting brightness from 1 to 9

KEY principle:

can't detect any press operation after Period time, back light off. Any press operation, light on.

9.1.7 Demand setting



Press **Enter**, change to next line.

Press **Up/Down**, modify value on current line.

Long press **Up/Down**, change display number position.


“Method” choice demand type:

Sliding: Time sliding mode

Fixed: Time fixed mode

Interval (Min) : from 1 to 60 minute

9.1.8 Reset setting

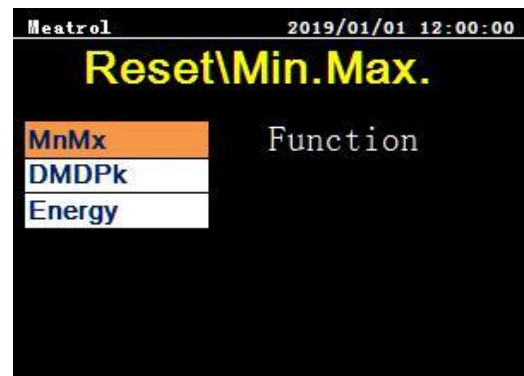

Press **Enter**, change to next line.

Press **Up/Down**, modify value on current line.


Long press **Up/Down**, change display number position

MnMx: Reset Minimum/Maximum value

DMDPk: Reset Maximum Demand value

Energy: Reset Energy

10. “Info” interface

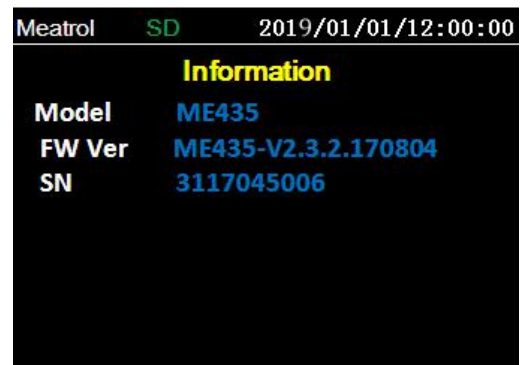

Info interface is used for display the information

Model: meter Model No.

FW Ver: Meter Firmware version Number

SN: Series Number

SHANGHAI PINYAN M&C TECHNOLOGY CO., LTD.

Tel: +86 021 64850006

Fax: +86 021 64850006

E-mail: info@meatrol.cn

Website: www.meatrol.cn

Unit 55, No.2155, Lianhua south Road, Minhang District,
Shanghai, China (201109)

© 2018 SHANGHAI PINYAN M&C. All Rights Reserved.